




No. 8

Do - It - Yourself Solutions

Upgrade an old room with ClassiCove™ Cornice

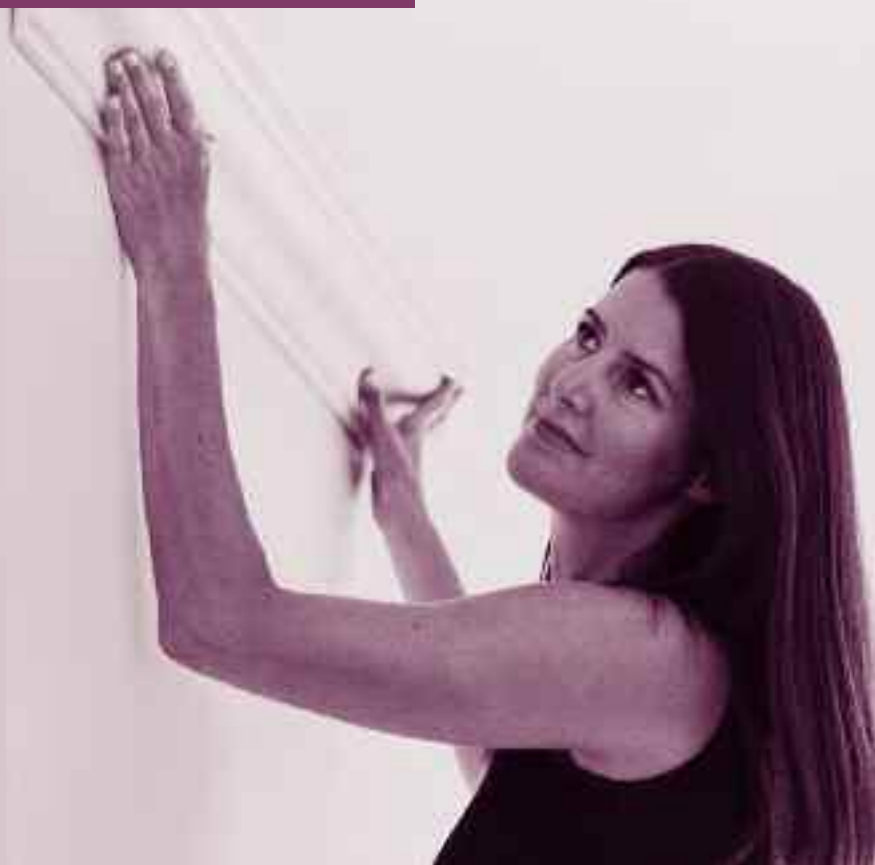

What you will need for the job



DIY Cornice Adhesive
DIY 150mm Broad Knife

Other

ClassiCove™ Cornice –
New York or Sydney Cove
Measuring Tape
Fine Tooth Saw
Small Tool
ClassiCove™ Mitre Box
Sponge (clean up)

Installing ClassiCove™ over existing 55mm cornice

Preparation

To ensure accurate placement of Retrofit Cornice, fit ClassiCove™ New York or Sydney Cove cornice over existing 55mm cornice and mark with a pencil or string line where the bottom of the cornice will be.

Measuring and cutting


Measure length of cornice required for each wall and check that the existing cornice is fixed firmly to the wall.

Mark edge

Using the existing cornice as a guide, mark the bottom edge of ClassiCove™ Cornice lengths to fit wall measurements. (It's helpful to actually write on the paper on the bottom edge of the cornice with a pencil.)



Ready to cut

Using ClassiCove™ Mitre Box, place cornice in mitre box upside down so that the bottom edge is uppermost in the box. (Check label on back of cornice for placement of ClassiCove™ on wall and ceiling.) Cut with a push pressure only. Use only a fine tooth saw.

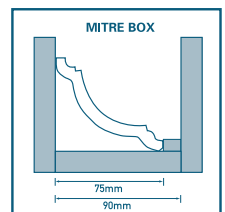



External angles

Cut cornice with saw as shown.

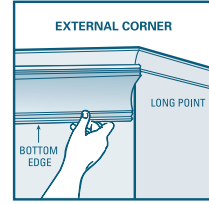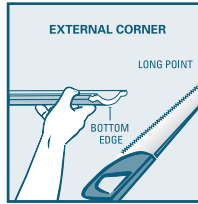


Internal angles

Cut cornice with saw as shown.

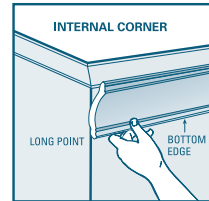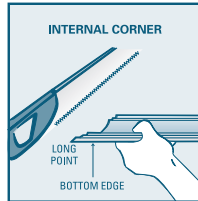



Application

- 1 Ensure wall/ceiling surface around existing cornice is free of dirt, grease and flaking or loose paint.
- 2 Part-drive temporary nails along the bottom edge of where the cornice will be to assist with correct placement and support of ClassiCove™ Cornice.
- 3 Mix DIY Cornice Adhesive according to instructions on packaging. Using a broad knife, butter a 10mm bead (strip) of adhesive to the back edges of the cornice and to mitres.
- 4 Press the ClassiCove™ Cornice firmly into position over the existing 55mm cornice, squeezing excess adhesive out from under the cornice. Leave for 20 minutes.

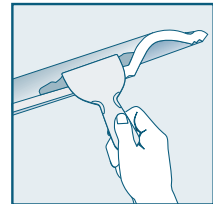

Finishing

- 1 Remove temporary nails and excess adhesive when partially set and smooth adhesive along mitres using the small tool.
- 2 Clean off surplus adhesive with a wet sponge leaving a smooth surface ready for decorating.

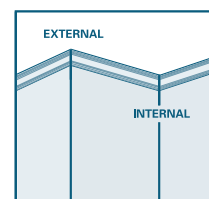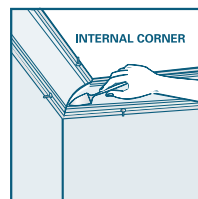

Handy Hints

- 1 Measure twice, cut once.
- 2 When cutting cornice using the mitre box, mark the bottom edge of cornice with a pencil (check label on back of cornice for placement of ClassiCove™ on wall and ceiling.)
- 3 For long lengths of cornice, part-drive temporary supporting nails in wall and ceiling along length of cornice.
- 4 Use cornice offcut or spare piece to practice cutting mitres before actually cutting cornice.
- 5 Only mix enough adhesive to install one length of cornice at a time.

Health & Safety

- 1 Do not ingest contents of product packaging. If ingested, seek medical advice. 
- 2 Avoid creating dust when handling, mixing or sanding as dust from packaged products may contain crystalline silica. Repeated inhalation of silica dust over long periods of time may lead to bronchitis, silicosis or cancer. If dust is unavoidable, ensure adequate ventilation, wear eye protection and an approved disposable face mask that conforms to Australian Standards AS 1716 Type P1 or P2.
- 3 If dust or paste causes skin irritation, use impervious PVC, Nitrite or Rubber gloves.
- 4 Keep contents out of reach of children. 

Contact Information


In Emergencies call 1800 033 011, Poison Information on 13 11 261

Note: If you don't feel confident enough to take on this project, contact your local Boral Plasterboard sales outlet for a list of competent contractors in your area.

For further technical assistance or more information on Boral Plasterboard DIY products, please contact TecASSIST 1800 811 222 or your local Boral Plasterboard sales office:

QLD	07 3215 2244	SA	08 8240 8888	VIC	03 9214 2138
TAS	03 6278 9966	ACT	02 6280 4243	WA	08 9400 2666
NSW	02 9638 0571	NT	08 8984 4484		

Boral Australian Gypsum Limited
A.C.N. 004 231 976
676 Lorimer St, Port Melbourne Vic 3207
<http://www.boral.com.au>

 is a registered trademark of Boral Plasterboard.

